HITECH®

S 450 AMAZE
User Guide

INTRODUCTION

Thank you for choosing S 450, Dual SIM Android smart phone.

If you'd like your phone to live a long and fruitful life, please read this guide carefully and keep it for future reference. You never know when you might need it.

And don't worry if the pictures we use to demonstrate your phone's functions look a little different from what you see on its screen. It's the functions that matters.

Table of Contents

1 Safety 4
1.1 Safety Precautions 4
1.2 Using your phone safely 4
2 Understanding your Phone 9
2.1 Your Phone 9
2.2 Description Icons 10
2.3 Inserting & Removing the battery 10
2.4 Charging the battery 13
2.5 Power ON/OFF 13
2.6 Enter main menu 14
2.7 Enter sub menu 14
2.8 Use notification panel 14
2.9 Expand main interface 14
2.10 Add icons on the main interface 14
2.11 Move icons on the main interface 14
2.12 Delete icons on the main interface 14
2.13 Change wallpapers 15
2.14 Install APK through file manager 15
3 Using your Phone 16
3.1 Main Menu & Its Functions 16
4 Maintenance 18
5 Taking Care of your Device 19
6 Disclaimers and Copyrights 20

1.Safety

1.Safety Precautions

Please read through the following briefings carefully, and act in accordance with these rules, so as to prevent causing any danger or violating any law.

- Your mobile phone has been designed to compile with applicable safety requirements for exposure to radio waves. The radio wave exposure guidelines employ a unit of measurement called Specific Absorption Rate (SAR). The recommended SAR limit for mobile handset is 1.6 W/Kg averaged over a 6 minutes period and taken over a volume containing a mass 1g of human tissue.
- The highest SAR value of the device is 0.486 W/kg (head) and 0.578 W/kg (body) for 2G and 0.670 W/kg (head) and 0.496 W/kg (body) for 3G averaged over 10 gm of human tissue.
- Use cell phone when the signal strength is good. Keep your calls short or instead use headset or send a text message. This advice applies especially to children, adolescents and pregnant women.
- If you are using a Bluetooth headset device, please make sure it has a low power emitter.

2.Using your phone safely

On The Road

Using a phone while driving is illegal in many countries. Please follow local laws and drive safely at all times.

Near Sensitive Electronics

Don't use your phone near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment. For more information about how your phone affects pacemakers or other electronic equipment, please contact the manufacturer or your local distributor.
Your phone may cause interference when used near TVs, radios or automated office equipment.

While Flying

Your phone can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline personnel ask you to switch off your phone, or disable its wireless functions, please do as they say.

In Hospital

Your phone may interfere with the normal operation of medical equipment. Follow all hospital regulations and turn it off when you're asked to by posted warnings or medical staff.

At a Petrol Station

Don't use your phone at petrol stations. In fact, it's always best to switch off whenever you're near fuels, chemicals or explosives.

Around Water

Keep your phone away from water (or any other liquid). It's not a waterproof model.

Making Repairs

Never take your phone apart. Please leave that to the professionals. Unauthorized repairs could break the terms of your warranty.

Broken Antenna

Don't use your phone if the antenna is damaged, as it could cause injury.

Around Children

Keep your mobile out of children's reach. It should never be used as a toy and it might not be good for their health.

Original Accessories

Only use the original accessories supplied with your phone or those approved by the manufacturer. Using unapproved accessories may affect performance, make the warranty void, break national regulations on the use of mobile phones, or even cause injury.

Near Explosives

Turn off your phone in or near areas where explosive materials are used. Always obey local laws and turn off your phone when requested.

Emergency Calls

To make an emergency call your phone must be turned on and in an area where there's network coverage. Dial the national emergency number and press 'send'. Explain exactly where you are and don't hang up until help has arrived.

Working Temperature

The working temperature for the phone is between 0 Degree and 40 Degree Celsius. Please don't use the phone outside the range. Using the phone under too high or too low temperature might cause problems.

At very high volume, prolonged listening to a mobile phone can damage your hearing.

Battery Recommendations

Please put the battery in a well-ventilated place out of direct sunlight. Charge the battery at room temperature range.

If the time span of the battery after charging becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.

Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.

Use manufacturer approved batteries, chargers, accessories and supplies. Hitech will not be responsible for user's safety when using unapproved batteries or accessories.

Recycle Your Phone

The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling. of such hazardous waste.

Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment.

2.Understanding your Phone

2.1. Your Phone

2.2 Description Icons

Icon	Description	Icon	Description
	Shows the phone's network signal strength.		Shows phone's battery capacity.
	Speaker has been activated.		You have unread SMS.
	Call Forwarding		You have unheard voice mail.
	Call on hold		USB storage Turned on.
	The ring type is set on Vibration.		Edge network in use.
	You have missed calls.		2G network in use.
	In-coming call		A clock alarm is active.
	Flight Mode		Bluetooth ON

Note: Icons shown in manual may differ in actual product.

2.3 Inserting & removing the battery

Pls Note Schematic Diagrams may differ from actual product but operations described are same

Inserting the battery

1. Open the battery cover on the back of your phone.
2. Align the battery's contact points with those of the phone and gently press the battery down into place.
3. Replace the battery cover clicking it back into position.

Inserting the Battery

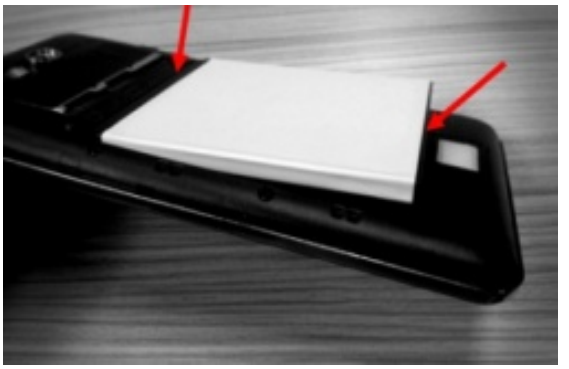

Closing the Back Cover

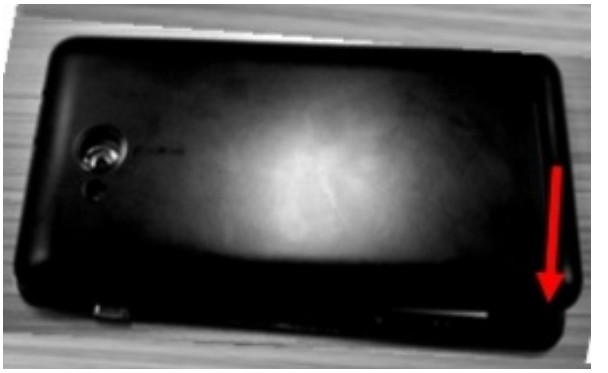

Removing the battery

1. Switch off your phone.
2. Open the battery cover.
3. Lift the battery up and out of your phone.

Open the Back Cover

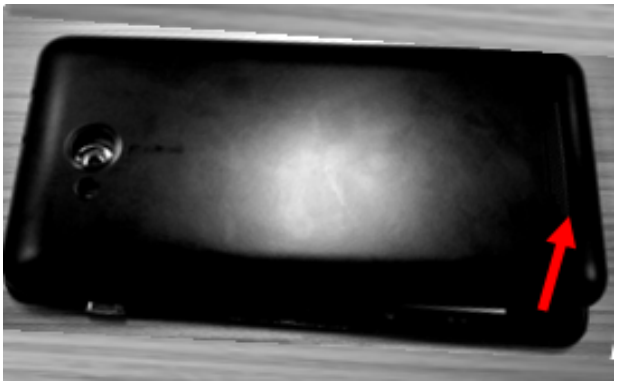

Removing the Battery

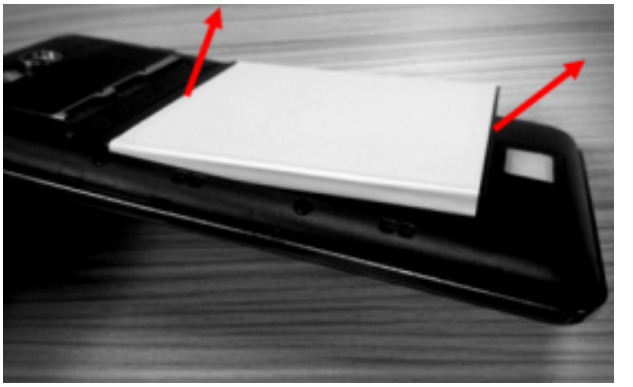

Installing the SIM Card and T flash Card

An SIM card carries useful information, including your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (PIN Unlocking Key), PUK2 (PIN2 Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, contacts data, and short messages data.

Note:

After powering off your mobile phone, wait for a few seconds before

removing or inserting an SIM card.

Exercise caution when operating an SIM card, as friction or bending will damage the SIM card.

Properly keep the mobile phone and its fittings such as the SIM cards beyond children's reach.

Installation

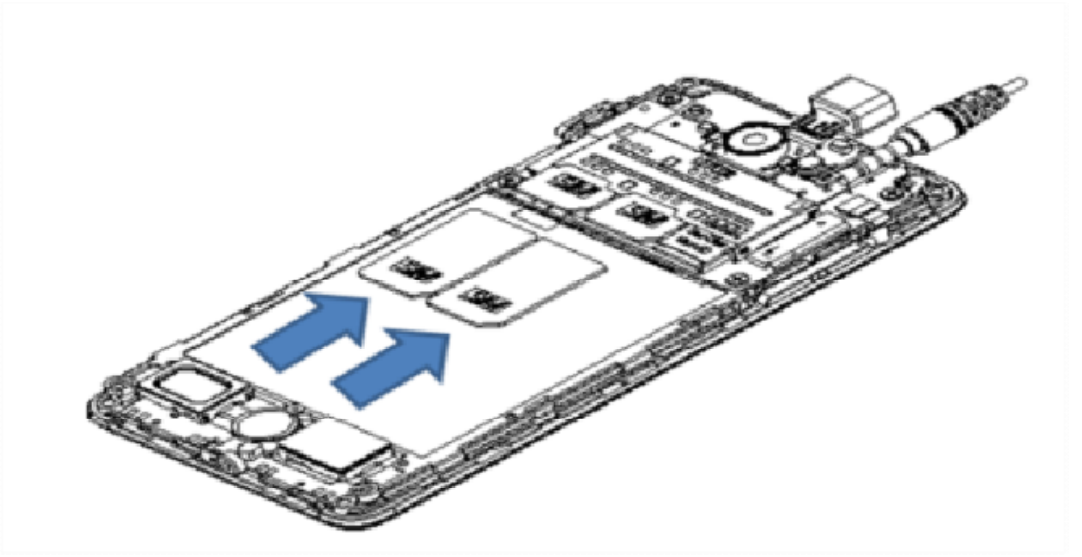

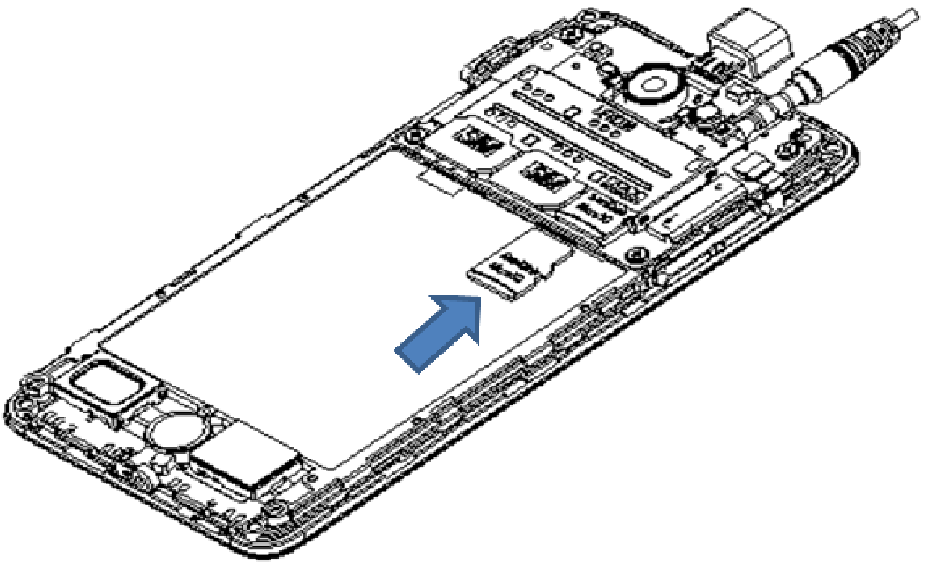

- Hold the power key for a while and select power off to power off the mobile phone

- Take the back cover away.
- Insert the SIM Card into the SIM Card slot lightly with the corner cutting of the card aligning to the notch of the slot and the gold plate of the card facing download, till the SIM Card cannot be further pushed in.
- Take the T flash card and insert it to the slot as shown in picture

The SD card is a miniature object. Keep it out of the reach of children for fear that children swallow it!

2.4 Charging the battery

The rechargeable Li-ion battery that comes with your phone is ready to be used, but is not charged. It is easy to do & can be done in 3 simple steps below:

1.Connect the charger to your phone, and plug it into a socket.

2.The battery indicator in the corner of the screen will scroll to show you it's charging.

3.When fully charged, the battery indicator will stop scrolling.

4.Disconnect the charger from your mobile, and unplug.

2.5 Power ON/OFF

Long Press the power key to power-ON/OFF the phone.

When you turn your phone on, it'll automatically check the SIM and show the following information on screen:

Input phone lock code: If you've set a lock code.
Input SIM1 PIN: If you've set a PIN for your SIM1.
Input SIM2 PIN: If you've set a PIN for your SIM2.

Note:

The PIN is supplied with your SIM. Please replace it with your own PIN code as soon as possible. Enter the wrong PIN three times, and your SIM will be locked. Then you'll need to contact your network service provider to ask for a PUK code to unlock it. It is applicable for both the SIMs if you are using 2 SIM Cards.

2.6 Enter main menu

In idle mode, press the Menu key to enter the main menu and click the Home key to return.

2.7Enter sub menu

Once at the main menu, click the icon to select the submenu, press **Back Key** to return to the previous menu, and press the **Home Screen** to return to the home screen.

2.8 Use notification panel

As a new notification appears in the notification area, slide down in the area to view the contents of the notification.

2.9 Expand main interface

The main interface may extend and exceed the screen width to provide more space for newly added shortcuts and tools.

Slide your finger horizontally on the main interface to extend to the left or right area of the main interface.

2.10 Add icons on the main interface

Long press any empty space on the main interface to open “Add to Home screen”. Select “Shortcuts”, “Widgets”, “Folders”, etc to add.You can also long press the icon on the main menu until it’s enlarged and the mobile phone vibrates, and copies the icons in the main menu to the main interface.

2.11 Move icons on the main interface

1.Long press the icon on the main interface until it’s enlarged and the mobile phone vibrates.

2.Drag the icon to the desired position and then release it. X

2.12 Delete icons on the main interface

1.Long press the icon on the main interface until it’s enlarged and the mobile phone vibrates.

2.Drag the icon into to delete it.

2.13 Change wallpapers

1.Long press “Touch screen” to open the menu.

2.Press “Wallpapers” “Gallery /Live wallpapers / “Wallpapers”, and Select the wallpaper and press “Set wallpaper” to complete.

2.14 Install APK through file manager

APK is a packaging file format for the Android mobile operating system.

1. Please copy the downloaded APK file into the SD card, and then insert the SD card into the terminal.
2. In idle mode, click Main Menu to enter the main menu.
3. Click “File Manager” to enter the directory of SD card.
4. Click the APK file you wish to install, and follow the installation wizard.

3. Using your Phone

3.1 Main Menu & Its Functions

Select to enter the main menu…

Allows you to view a list of features available in your phone-

1. **Alarm**
   Allows you to set the alarm from Clock.
2. **Browser**
   Browse the search engine- default set as Google.
3. **Calculator**
   Allows you to make tedious calculations quickly.
4. **Calendar**
   View the calendar.
5. **Camera**
   Allows you to click pictures anytime you want. Your S 450 has high definition Camera which ensures you click good quality of pictures and stores them under the Gallery folder. In Camera, easily slide to Camcorder to record Video Files.
   Note: You need to have SD card to store the Pictures & Videos.
6. **Contacts**
   Contacts from your SIM can be downloaded into your phone by Import / Export
   Go to: Menu>contacts>Press Menu Display>Import/Export
7. **Email**
   Allows you set up your POP/IMAP email accounts.
8. **Gallery**
   Allows you to save & view photos & videos.
9. **Market**
   Log in to your Gmail account to view all the applications & download from thousands of applications available under the Google Market.
   Note: *To use this app please connect to an internet connection.* ***Menu> Settings> Wireless & Networks>Mobile Networks>Data Enable****.*
10. **Messaging**
    Allows you to view messages sent & received as a thread.
11. **Music**

View the list of songs available in your phone. View the artists, albums, playlists & more.

12. File Manager

You could install the files in APK format.

13. Settings

Modify settings under the following-

- Dual SIM Settings
- Wireless & networks
- Call Settings
- Sound
- Display
- Location & Security
- Applications
- Accounts & Sync
- Privacy
- Storage
- Language & Keyboard
- Voice input & output
- Accessibility
- Date & time
- About Phone

14.SIM Toolkit

This service is provided by the operator. It provides many types of personalized message services.

15. Sound Recorder

Records sound.

4.Maintenance

Use a dry soft cloth to wipe general dirt.

Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched or could even result in the fading of color.

5.Taking Care of your Device

Your device is a product of superior design and craftsmanship and should be handled with care. The following suggestions will help you protect your phone:

- Always keep the small parts of the phone away from children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

6. Disclaimers and Copyrights

Disclaimers

The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.

The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the later shall govern.

Hitech keeps the right to make modifications to any of the content in this user guide without public announcement or prior notification.

For devices with external power supplies, plug socket should be placed in short distance and easily accessible.

Using the wrong type battery replacement there is a danger of explosion, be sure to follow the instructions disposal of used batteries.

Copyrights

Hitech all rights reserved the copy right of the product. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of is strictly prohibited.